


1. Name and Parts

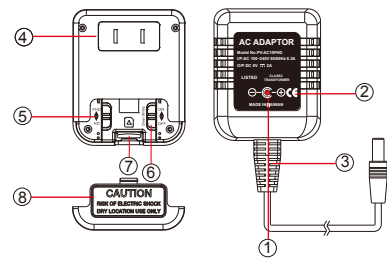

- 1. Camera Lens
- 2. Microphone*
- 3. Covert Power Cord
- 4. Two-Prong Power Supply
- 5. Resolution Switch
Up: FHD Down: HD
- 6. Overwrite Switch
Up: On Down: Off
- 7. Memory Card Slot
- 8. Bottom Covert Piece

*No microphones are available for USA market.

 
2. Package Content



Covert Power Cord



Memory Card




Adapter Head -
European Standard


1

3. Recording Operation

 - 3.1. Remove the bottom lid by sliding it downwards as shown in illustration 1
- 3.2. Insert memory card into slot as shown in illustration 2
- 3.3. Slide the bottom lid back to place.




 (1)



(2)

- 3.5. Simply plug the charger DVR into an electrical outlet to power on the device.
- 3.6. Recording will start as soon as a movement is detected.

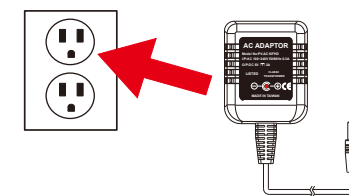


2

4. Retrieving Video Footage

- 4.1. Video file is stored in the SD Memory card.
- 4.2. Remove SD card from DVR.
- 4.3. Insert SD card into a card reader or SD card slot in your PC.
- 4.4. Computer detects the storage and user may browse and operate the storage as typical folder directory.
i.e. Rename, copy and paste, delete, duplicate, etc.

Note:

Each video file is recorded with 10 minutes time in length. This setting is fixed and can not be changed.

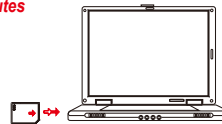


Note:

Unlike PV-AC20, PV-AC10FHD does not include USB and A/V Out connection. PV-AC10FHD supports up to 32GB SD card.



USB Connection

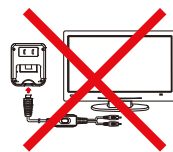


A/V Out Connection

3

PV-AC10FHD

1080p DVR in Power Adapter Desig Quick Guide

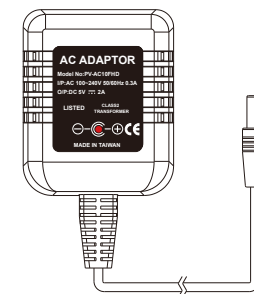

LawMate, innovation never stops

LawMate[®]

V1.0