

HD 1080P Clear Eye Glasses Covert Hidden Camera WiFi IP Quick Guide

Charging Your Camera

Using the included USB cable and wall charger, please charge the camera for at least 2 hours. The LED on the camera will turn yellow when connected to power.

Recording with your Camera

The camera requires the use of a Micro SD card up to 128GB. Before turning your camera on, please insert your Micro SD card into the camera.

To power the camera on short press the power button. Once the camera has powered on, the LED will turn a solid blue and red. After about 40 seconds the camera will start recording automatically and the blue LED will turn off leaving the red LED to either blink or be solid. Depending on if you have connected to the cameras WiFi.

To enter covert recording mode short press the power button only when the red LED is on. This will turn off all LEDs while still allowing you to record. To leave covert mode, short press the power button again. You should then see the red LED turn back on.

To turn the camera off and stop recording press and hold the power button for 5 seconds or until the red LED turns off.

Using WiFi with your Camera

After your camera has turned on wait about 40 seconds for the WiFi to automatically turn on. Use your phone connect to the camera's WiFi by looking for the WiFi name that begins with the letters "CM".