


High Definition Video Camera

Split Type Mini Full HD DVR with 2.5"LCD

Full HD
1080P

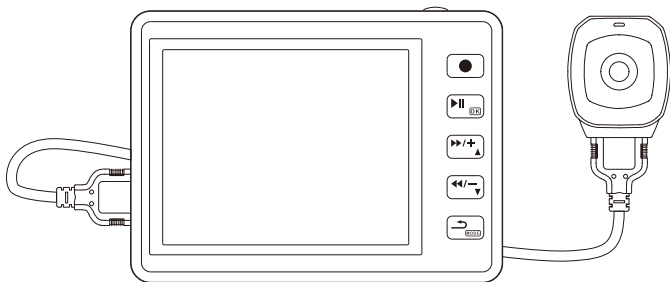

(the camera will be different if you choose a non-pinhole HD camera)

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Attention

The electromagnetic fields at the specific frequencies may influence the picture of the recorder.

Be sure to read the following before using the recorder and the mini Camera.

Trial recording

Before you record one-time events, you may want to make a trial recording to make sure that the recorder and the camera are working correctly.

Notes on image data compatibility

Playback of moving images recorded with your recorder on other equipment

and playback of moving images recorded or edited with other equipment on your recorder are not guaranteed.

Do not shake or strike the recorder

In addition to malfunctions and inability to record moving images, this may render the SD card unusable of image data breakdown, damage or loss may occur.

LCD screen and mini camera

Be careful when placing the camera near a window or outdoors. Exposing the LCD screen or the lens of camera to direct sunlight for long period may cause malfunctions.

Back up recommendation

To avoid the potential risk of data loss always copy data to a disk.

Table of Contents

Getting Started

Identifying the parts of the recorder	1
Identifying the indicator on screen	2
How to install the camera	2

Basic Operations

Installing the battery pack	3
Installing the SD card	3
Installing the camera	3
Start/Stop recording	4
EV adjustment	4
Record with wired controller	4
Using enhanced wired controller	5
Taking photos	5
Playback operations	6
How to delete a file	6
How to lock a file	6
Movie playback	7
Viewing Photos	7
How to connect	8
Power supply connection	8
Computer connection	8
Using AV out cable to connect TV	8
Connecting external microphone	9

Table of Contents

System Setup


Resolution setup	10
Recording quality setup	11
Recording mode setup	11
White balance setup	12
External/Internal microphone setup	12
Record overwrite setup	13
Motion detection setup	13
TV type setup	13
Beep sound setup	14
Language	14
Time and date setup	14
Video rotation setup	14
Format SD Card	14
Default setting setup	15
Vibration setup	15
Time stamp setup	15
LCD Auto turn off	15
Split mode setup	16
Firmware	16

Specification

DVR specifications	17
Camera specifications	18

Accessories

Identifying the parts of the recorder

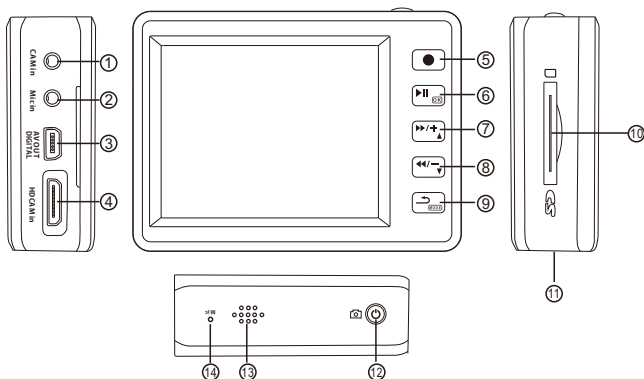

1. Extra camera in
2. External microphone in
3. USB port (2.0USB transfer/AV-OUT/wired control/DC-in)
4. HD camera in
5. Record
6. Play/OK
7. Up/Fast forward/EV +
8. Down/Fast backward/EV-
9. Return Menu/ Preview mode/playback mode
10. SD card slot
11. Tripod thread
12. Power/photo
13. Speaker
14. Built-in microphone


Getting started

LCD screen indicators


1. Recording resolution
2. Picture quality
3. Remaining time of memory
4. Motion detection symbol
5. Cycle recording symbol
6. Battery indicator
7. Date indicator (year/month/date)
8. Time indicator (hour/min/sec)
9. Remaining picture numbers

Other symbols

- **REC** Recording
- **5M** Photograph/Pixels

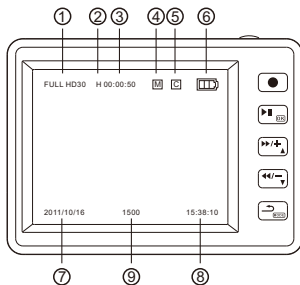

How to install the camera

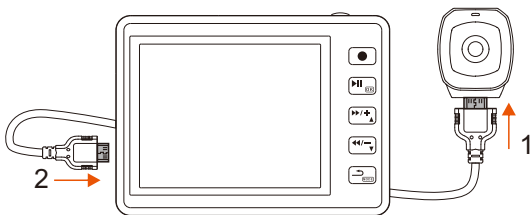


1. Use mini HDMI cable to connect the camera
2. Connect the cable to DVR

Basic Operations


A. Installing the battery pack:

- 1: Open the back cover (refer to picture 1).
- 2: Insert the battery pack in the right direction (refer to picture 2).
- 3: Close the battery cover (refer to picture 3).

 
Remarks: If the recorder will not be used for a long time, please remove the battery.



picture 1

 

picture 2

 


picture 3

B. Installing the SD card


- 1: Open the SD card slot cover.
- 2: Insert SD card with the “ ” mark facing toward the SD slot as illustrated (refer to picture 1).

C. Installing the camera

- 1: Insert the camera into recorder (refer to picture 2).

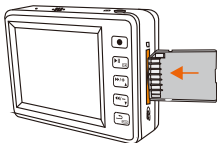

picture 1

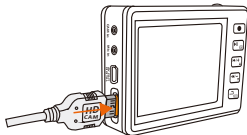

picture 2

Basic Operations

A: Start/Stop Recording

Press [] button (hold on for 2 seconds) to switch on recorder.


Press [] button to start recording.

Press again [] button to stop recording and return to preview mode.

B: EV Adjustment


EV can be adjusted in record/preview mode (as in the picture).

EV adjustment range:-1.7~+1.7

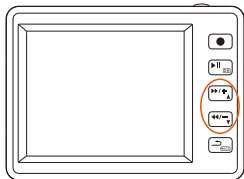


C: Record with a wired controller


- 1: Connect wired remote controller and device via DIGITAL port (refer to picture 1).
- 2: Press [REC] button on the wired control (hold for 2 seconds) to power DVR on.
- 3: Press [REC] to start recording, indication light of recording bright (red), recording (refer to picture 2).
- 4: In the process of recording, press [REC] on wired remote controller to stop recording, till indication light off, recording stop (refer to picture 3).

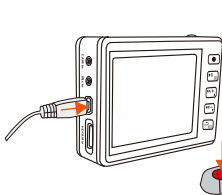

picture 1

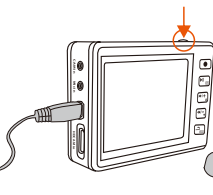

picture 2

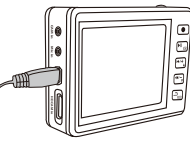


picture 3


D: Using the Enhanced Wired Control (optional)

supports auto recording and stop recording on power

- 1: DC input: DC 10V~42V
- 2: Connect Enhanced Wired Controller to the DVR via USB port (refer to picture 1).
- 3: Connect Enhanced Wired Controller and DC 10V~42V power cable (refer to picture 2).

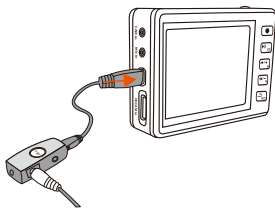

picture 1

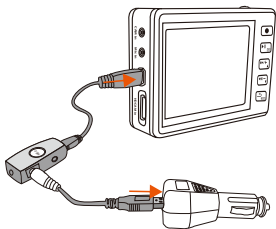

picture 2

Once device detects DC 10V~42V power supply, it will start recording automatically. While recording, if the power supply stops, the device will stop recording automatically. The stop recording delay time can be set in the system setup.

Note:

- 1: This function will depend on the system having a charged battery.
- 2: In stand by or recording mode, user can turn on LCD to preview.
- 3: In stand by or recording mode, user can connect device to another monitor to preview.
- 4: In recording mode, user can connect external MIC to device to enhance the audio quality. Sound from internal MIC and external MIC will be recorded together.

Taking Photos


- 1: Press [] (hold on for 2 seconds) to power on DVR.
- 3: Press [] to take photos.

*Photo Resolution: 5.0Mega Pixels; Photo Dimension: 2560x1920

Basic Operations



How To Playback

Only in standby mode the videos could be played back
Press [] to go to the playback list.
Press once again to shift the videos and photos
(refer to picture 1).

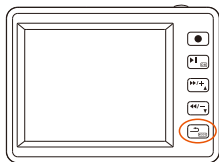

picture 1

Press arrow keys to choose the file to be played.

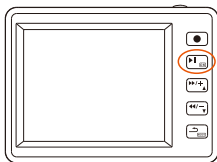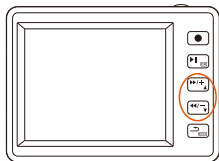

Press [] to start playing.

During the playing back
Press Up and Down key to adjust volume.
Press left and right keys to fast forward or rewind.

To Delete a File

Choose the file you want to delete. Press and hold the "" button for 2 seconds, and then confirm to delete the selected file.

To Protect a File

Choose the file you want to protect. Press the "" button, and then confirm to protect the selected file.


Movie playback

Choose the movie and press [OK]



(Movie playback-1)

Press [OK] to play/pause;
Press [Right] / [Left] to fast forward
/ fast backward;

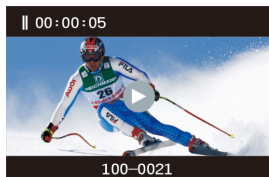

(Movie playback-2)


Photo Playback

Choose the photo and
press [OK] to show the selected picture.



(Photo playback-1)

Press [OK] to enter into a picture slide show;
Press [OK] again to stop slide show;
Press [Left] / [Right] to choose previous
/next picture.

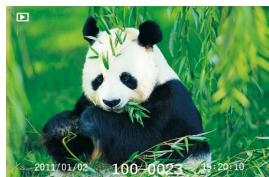


(Photo playback-2)


Basic Operations

HOW TO CONNECT


A. Power supply Connection

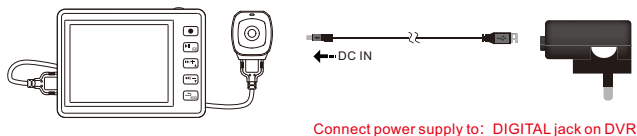


B. Connect to Computer via USB

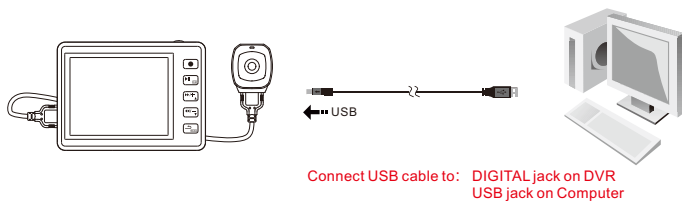

C. Connect to TV via AV / OUT

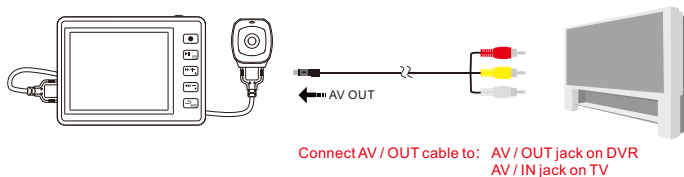

D: External MIC Connection (Optional)

 


System Setup

System Setup


- 1: Press [F2] times to enter system setup menu;
- 2: Use [UP] / [Down] to choose;
- 3: Press [OK] to confirm;
- 4: Press [F2] to quit.

Resolution Setup

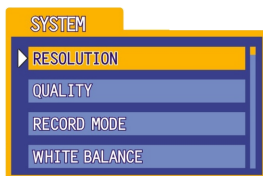

Display	Discription	Definition	fps
WVGA60P50	16: 9	WVGA 848x480	50
WVGA60P60			60
720P25	16: 9	720P 1280x720	25
720P30			30
1080P25	4: 3	1080P 1440x1080	25
1080P30			30
FULL HD25	16: 9	FULL HD 1920x1080	25
FULL HD30			30

Recording Quality Setup

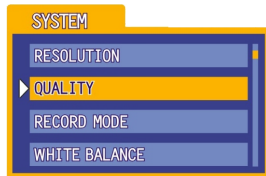


Resolution	Display	Bitrate
FULL HD 1920x1080	H	12Mbps
	M	10Mbps
	L	8Mbps
1080P 1440x1080	H	12Mbps
	M	10Mbps
	L	8Mbps

Resolution	Display	Bitrate
720P30 720P25 (1280x720)	H	8Mbps
	M	6Mbps
	L	4Mbps
WVGA 848x480	H	8Mbps
	M	6Mbps
	L	4Mbps

Record Mode Setup

Default Setting is PAL

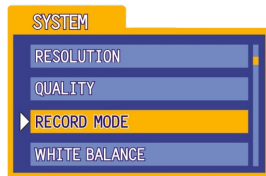


PAL	25 fps
	50 fps
NTSC	30 fps
	60 fps

System Setup

White Balance Setup

Choose different white balance value under different conditions. Default is AUTO.

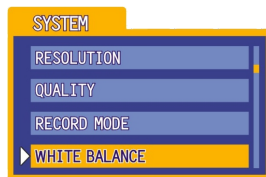


WHITE BALANCE	AUTO
	Sunny
	Cloudy
	Fluorescent
	Incandescent

External Microphone Volume Setup

Set the external microphone volume from 1 to 7; Default is 7.


When the external microphone is plugged in, audio from external microphone and internal microphone will be recorded together.

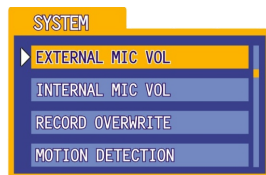

Internal Microphone Volume Setup

Set the volume of internal microphone from 1 to 7. Default is 7.

When the external microphone is plugged in, audio from external microphone and internal microphone will be recorded together.

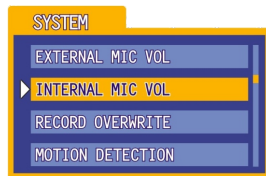


Record Overwrite Setup

When Record Setup is active, there will be [C] on the screen.

Recorder will save a new file every 5 minute; When the SD card is nearly full, system will delete the oldest file and replace it with new file.

Recommend to use this option together with the power adaptor.

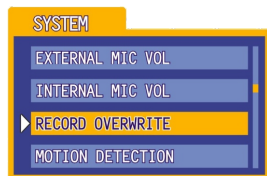


Motion Detection Setup

When motion detection is active, there will be [M] on the screen.

If any motion is detected, the system will start recording in 2 seconds.


Recommend to use this option together with the power adaptor.

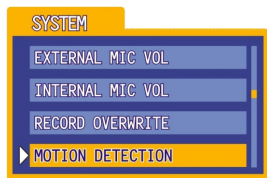

OFF	No Motion Detection
30 SEC.	Stop recording after 30sec, if no motion
1 MIN.	Stop recording after 1min, if no motion
3 MIN.	Stop recording after 3min, if no motion
5 MIN.	Stop recording after 5min, if no motion

TV Type Setup (PAL/NTSC)


To choose PAL/NTSC based on different countries.

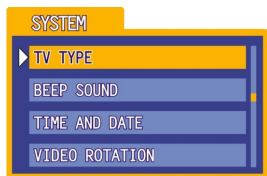

System Setup


Beep Sound Setup

Choose [ON]/[OFF] to turn on/off the beep sound

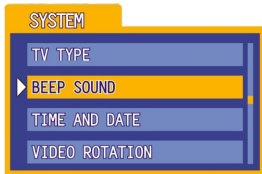


Time and Date Setup

Press On to enter into time and date setup; use [UP]/[Down] to increase or decrease the number and press [OK] to confirm.

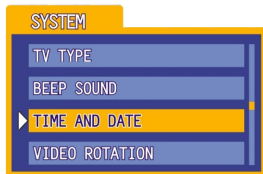


Video Rotation Setup

Choose [standard]/[inverted] to make the picture flip 180°

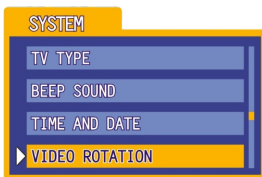

Language Setup


Choose English/简体中文/繁體中文

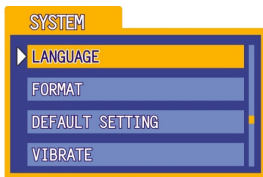

Format SD Card

To format the entire SD card


Please note: any files will be deleted included the locked files.

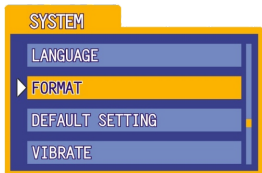

System Setup


Default Setting Setup

Choose Yes, to restore the factory settings

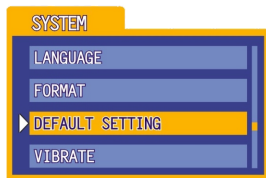


Vibration Setup

Choose [ON]/[OFF] to turn on/off the vibration indicator

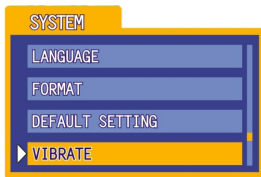

Time Stamp Setup


If you choose the time stamp, then there will be a stamp showing the time on the video clip.

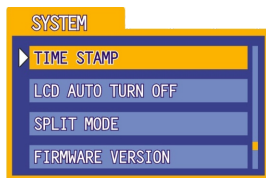

OFF	No time stamp
Date/Time	Date/Time format: 2011.01.01 21:21
Date	Date format: 2011.01.01
Time	Time format: 21:21

LCD Auto Turn OFF Setup

The LCD will enter into power-save mode after the set time

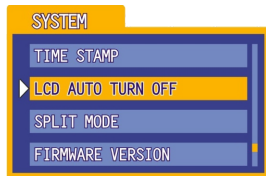


OFF	LCD will never turn OFF
30sec	LCD will turn OFF in 30sec
1min	LCD will turn OFF in 1min
5min	LCD will turn OFF in 5min

System Setup

Split Mode Setup

System will save files every set time.


Please note: if the SD card is full system will stop recording.

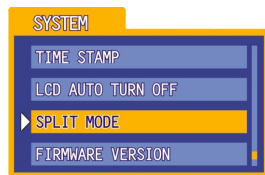

Default Setting	System will save file only when stop recording
2min	System will save files every 2minutes
5min	System will save files every 5minutes
15min	System will save files every 15minutes
30min	System will save files every 30minutes

Firmware

To check the firmware version

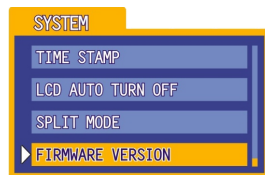

DVR

Digital Screen	2.5" 960×240 TFT LCD
Recording Format	MOV
Codec	H.264
Recording Resolution	1920X1080(30/25 fps)
	1440X1080(30/25 fps)
	1280X720(30/25 fps)
	848X480(60/50 fps)
Photo Resolution	2592*1944
Battery	3.7V 1400mAH (2.5hours recording)
Storage	Support Max: HCSD 64G(Class 4) (30mins for 4GB card @ Full HD)
AV Output Jack	USB Port
Camera in	ø2.5mm, RCA, 5V 300mA Out
1/4"-20 thread	Yes
USB Jack	High-speed USB2.0
DC Input	DC 5V 1.5A
External Microphone	3 rings with ø2.5mm
Dimension	75×55×20mm

Specifications

Camera

Camera Degree	62°(140°: for a non-pinhole camera)
Low light Sensitivity	3LUX
Cable Length	1.5m
with back clip	

Accessories



AC Wall Charger



Back clip cover



USB Cable



Wired Control
*with 2 Magic pads
*cable length:1.5m



AV Out Cable



Button Cover
(only for pinhole camera)



1400mAh Battery



2 bags of extra buttons
(only for pinhole camera)



DVR Holster

High Definition Video Camera

Split Type Mini Full HD DVR with 2.5"LCD

Full HD
1080P



(the camera will be different if you choose a non-pinhole HD camera)